



Product repair/configuration

RC 4100 - RC 4130 - RC 4300 - RC 4350 - RC 4360 -
RC 4370 - RC 4400 - RC 4401 - OC 3300 - OC 3400

Cleaner disassembly



Before handling the machine, disconnect the box from the power supply.



