



Product repair/configuration


RC 4100 - RC 4130 - RC 4300 - RC 4350 - RC 4360 -
RC 4370 - RC 4400 - RC 4401 - OC 3300 - OC 3400

Cleaner reassembly




Before handling the machine, disconnect the box from the power supply.

①

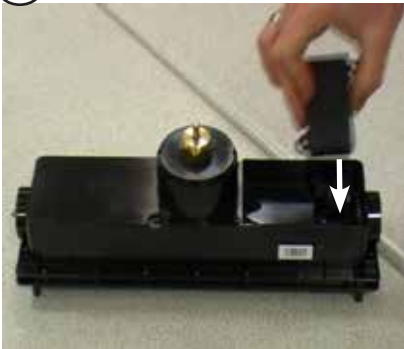


②

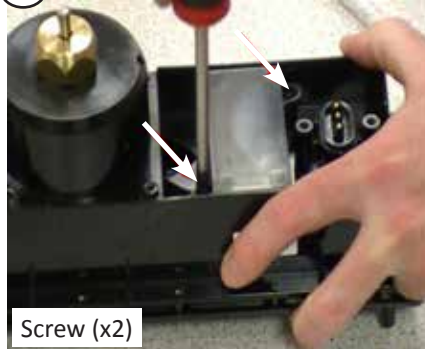

Screw (x2)

③

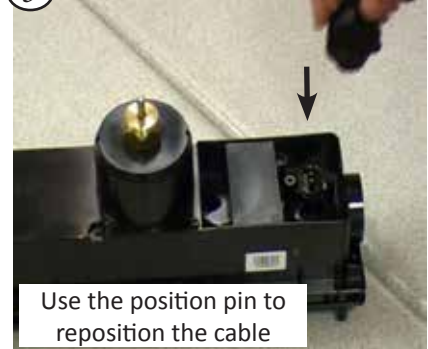


Use the position pin to reposition the cable

④



Screw (x2)

⑤

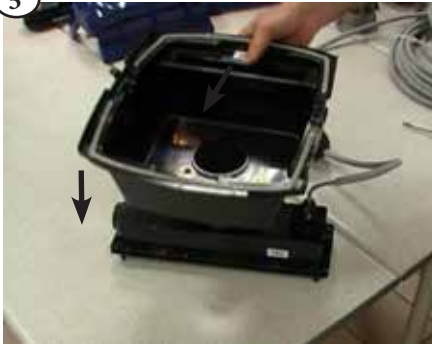

⑥



Screw (x2)

⑦




Placer la goupille

⑧



⑨

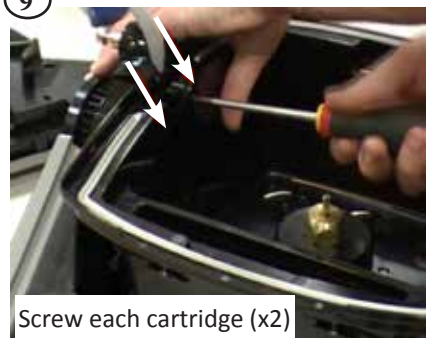


Screw each cartridge (x2)

⑩




⑪

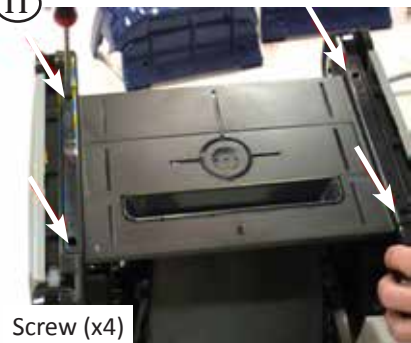

Screw (x4)

⑫

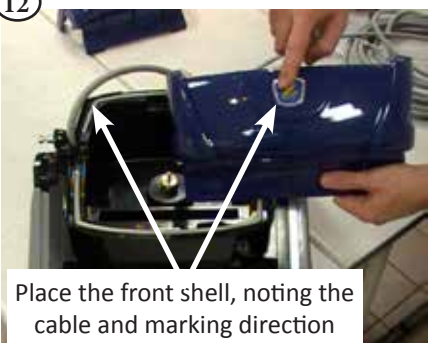

Place the front shell, noting the cable and marking direction

